


raxter

RACK YOUR BIKE

www.raxterracks.com

Anti-Sway Nut Installation

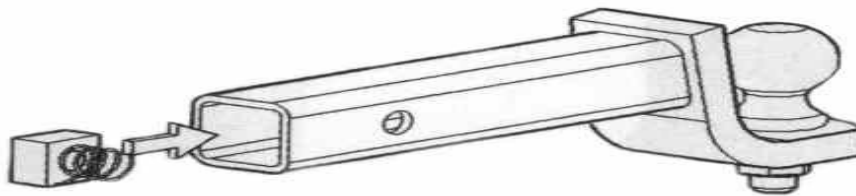

1. Remove the Quick Pin from the Main Tube of the Rack by depressing the button on the quick pin and pushing it through the hitchpin hole and then pulling the quick pin out.
2. Insert the anti-sway spring nut into the black cover by placing the nut side inside of the black cover, aligning the holes.
3. Slide the black cover and spring nut into the main tube of the rack by squeezing the spring so that the spring nut and the black cover will fit into the main tube.
4. Align the holes of the spring nut and the hitchpin hole of the main tube.
5. Place the main tube into the hitch on the vehicle and align the holes.
6. Insert the bolt with the lock washer